


AXE ULTRA SLIM ISOLATING TRANSMITTER (SSTMT OPERATION MANUAL)


[TERMINAL CONNECTOR]



(Output Power)

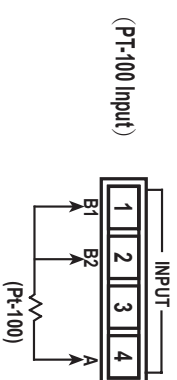


(PT-100 Input)

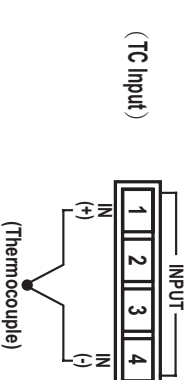


(TC Input)

[INSTALLATION]


- Set the unit so that its DIN rail adaptor is at the bottom.
- **MOUNTING THE UNIT ON A DIN RAIL**
 - A: Hang the upper hook at the rear side of unit on the DIN rail.
 - B: Push in the lower in keeping pressing the unit to the DIN rail.

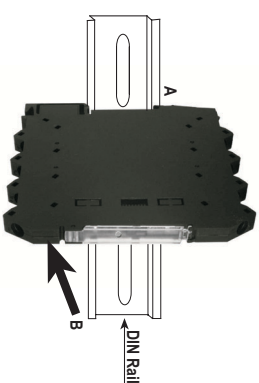


- **REMOVING THE UNIT**
 - A: Pull down the DIN rail adaptor using a minus screw- driver.
 - B: Pull out the lower part of the unit.
 - C: Remove the upper part from the DIN rail.

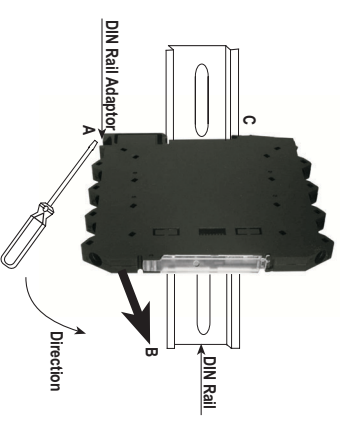


[NAME OF PART]

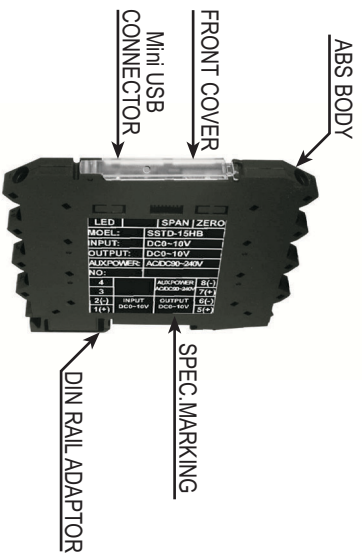

FRONT PANEL CONFIGURATION (with the cover open)

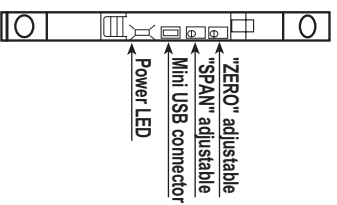

[OUTSIDE DIMENSION]

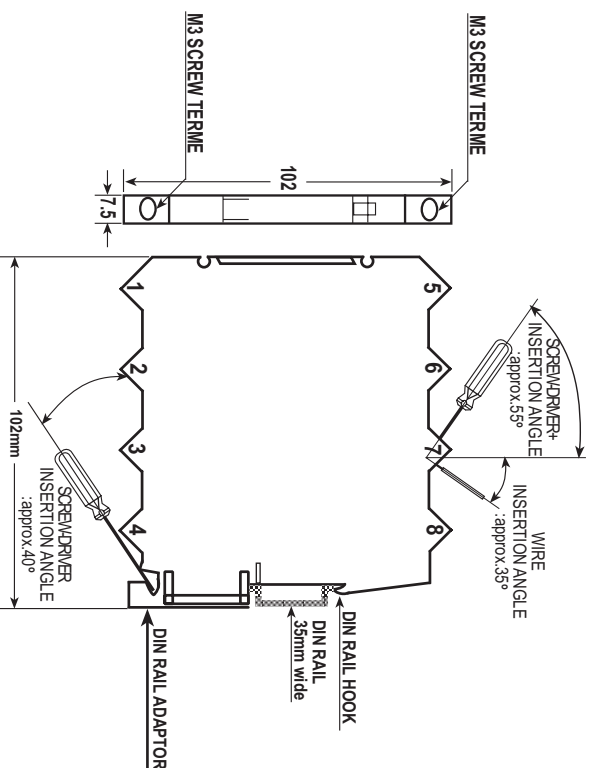

[OUTPUT SWITCHING TABLE]

(Switching status: 1=ON, 0=OFF)

Output range	1-2-3-4-5-6	7-8
0-0.5V	0-1-1-1-1-0	1-1
0-1V	1-0-1-1-1-0	1-1
0-2V	1-1-0-1-1-0	1-1
0-4V	1-1-1-0-1-0	1-1
0-5V	1-0-1-0-1-0	1-1
1-5V	1-1-1-0-1-1	1-1
0-6V	1-1-0-0-1-0	1-1
0-8V	1-1-1-1-0-0	1-1
0-10V	1-1-0-1-0-0	1-1
2-10V	1-1-1-1-0-1	1-1
0-1mA	0-1-1-1-1-0	0-0
0-2mA	1-0-1-1-1-0	0-0
0-5mA	0-1-0-1-1-0	0-0
1-5mA	1-1-0-1-1-1	0-0
0-10mA	1-0-1-0-1-0	0-0
2-10mA	1-1-1-0-1-1	0-0
0-16mA	1-1-1-1-0-0	0-0
0-20mA	1-1-0-1-0-0	0-0
4-20mA	1-1-1-1-0-1	0-0

