




[PARAMETER DESCRIPTION]

- ◎ "ALARM" (Alarm value setting)
- ◎ "STA-T" (Relay start delay time setting 0~99.9s)
- ◎ "DEL-T" (Alarm delay time setting 0~99.9s)
- ◎ "ㄷ ㄷ" (Pass code : The pass code is right into next page. otherwise return normal display)
- ◎ "ㄱ ㄷ" (Input measurement network selective, 1φ 2w, 3φ 3w)
- ◎ "ㄷ ㄷ" (CT rate setting value 1~2000, using external CT while Input above AC 5A)
- ◎ "ㄱ ㄷ" (Reset relay mode)
 - While ㄱ ㄷ = N reset AL by manual (press RST key of panel)
 - While ㄱ ㄷ = L reset AL by parameter ㄱ ㄷ
- ◎ "ㄱ ㄷ" (Decide alarm latch or reset)
- ◎ "ㄱ ㄷ" (Alarm action adjustable HI, LO, GO, HL)
 - While ㄱ ㄷ = HI: display ≥ AL + HY (alarm action)
Display ≤ AL - HY (alarm off*)
 - While ㄱ ㄷ = LO: display ≥ AL + HY (alarm off*)
Display ≤ AL - HY (alarm action)
 - While ㄱ ㄷ = GO: AL + HY ≥ display ≥ AL - HY (alarm action)
Otherwise (alarm off*)
 - While ㄱ ㄷ = HL: AL + HY ≥ display ≥ AL - HY (alarm off*)
Otherwise (alarm action)
- ◎ "ㄱ ㄷ" (Decide reset alarm value of memory and alarm times of memory)
- ◎ "ㄷ ㄷ" (Lock key of panel setting)
- ◎ "ㄷ ㄷ" (Adjust display minimum)
- ◎ "ㄷ ㄷ" (Adjust display maximum)


*Alarm off ≠ relay off, relay off by parameter ㄱ ㄷ decide

[FUNCTION KEY CALL OUT]


1. Alarm value setting

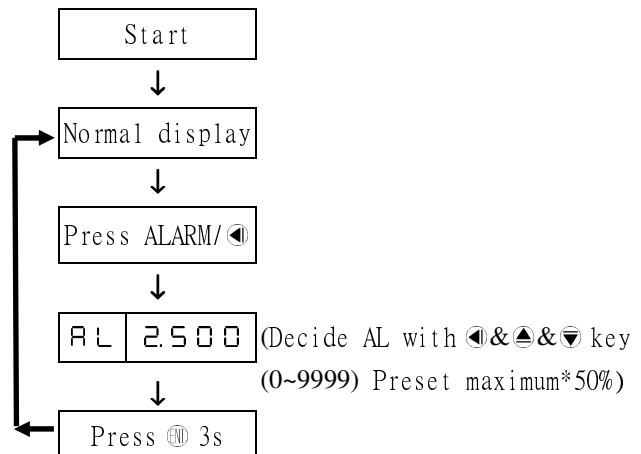


[Name of part]

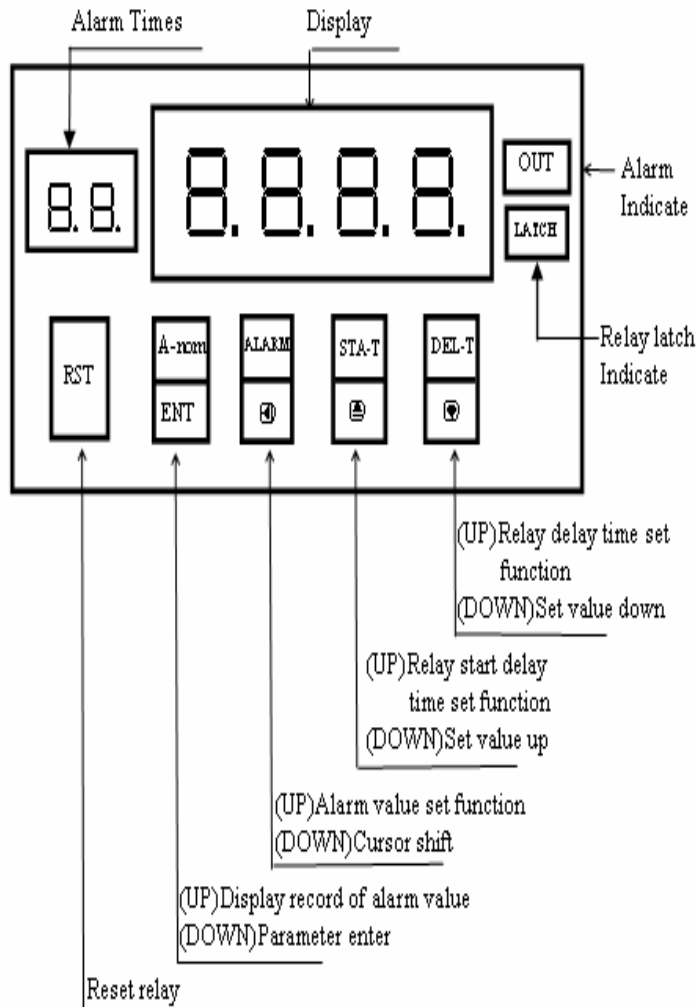


2. Relay start delay time

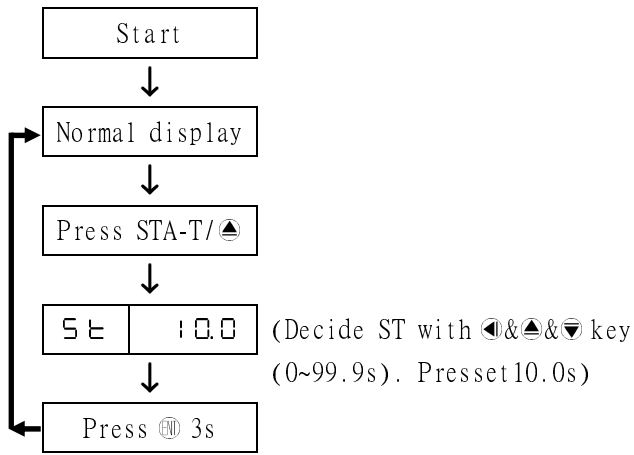

3. Alarm delay time setting

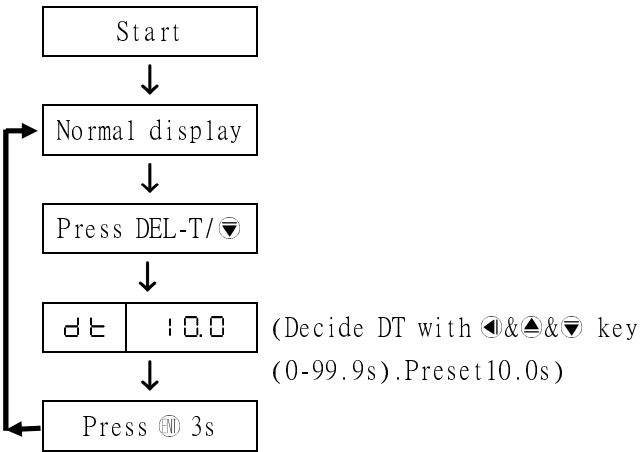


4. Display record of alarm value

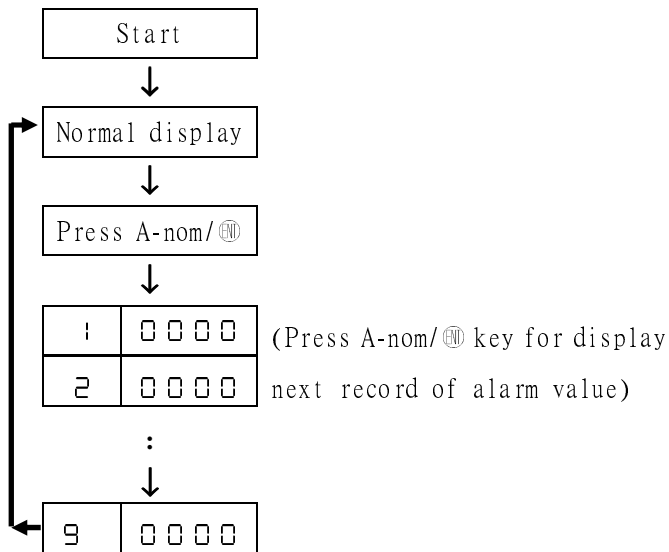

Note. It will recover while alarm times > 9

[PARAMETER OPERATION MANUAL]

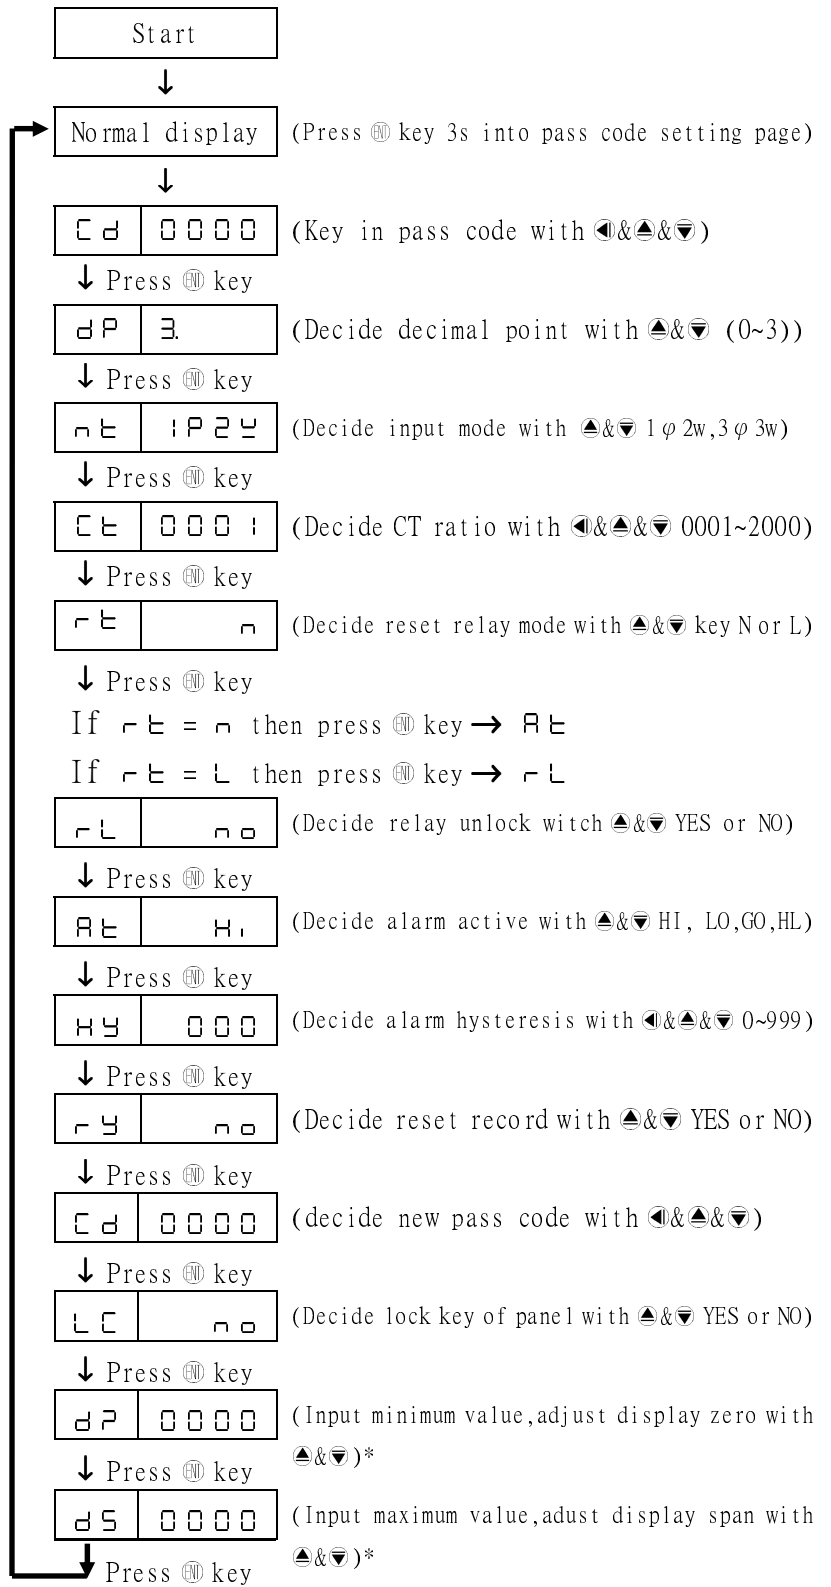

NOTE: It will return normal display while press ▲&▼ at same time

It will return normal display while no key in 30s in any page

The preset value is show in operation manual

*It like use digital VR while DZ and DS